



## 13

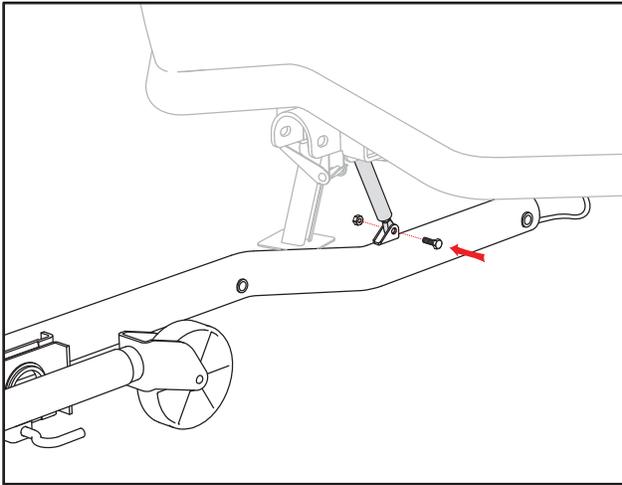

Rotate the tongue into proper orientation and attach the tilt damper end eye to the bracket at shown using the M8 bolt provided.

Do not over tighten the nut. The damper should be able to rotate on the bolt.

## 14

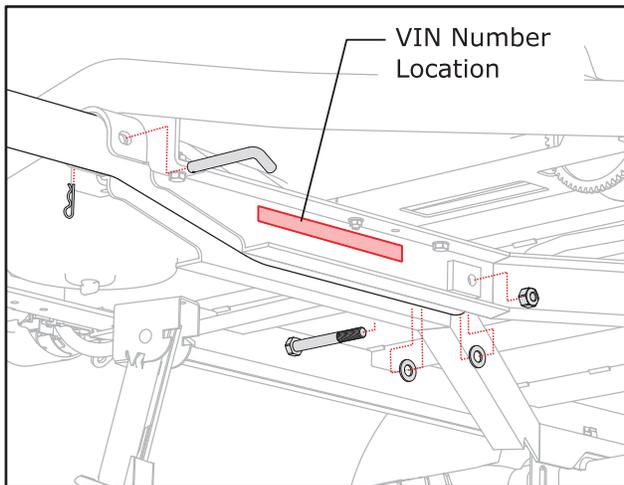

Lift the tongue into position beneath the trailer.


Install the hitch pin to help keep the tongue in place while installing the pivot bolt.

Install the pivot bolt as shown

**Note:** The two washers should be located between the tongue and the frame C-channels. They do not go under the bolt head or the nut.

**Note:** Trailer and Tongue VIN # must match.

## 15

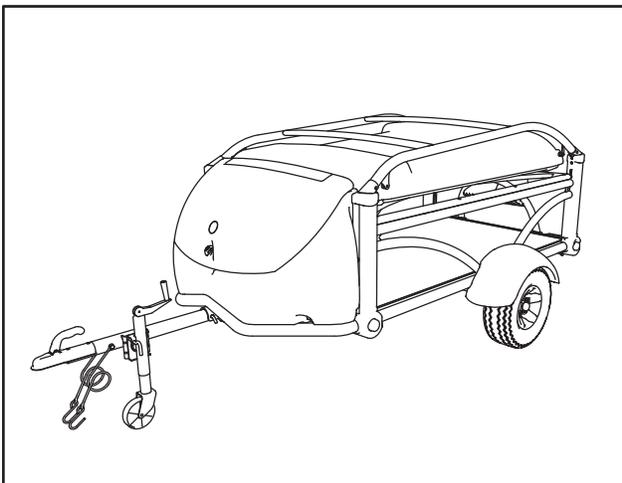

Remove remainder of packaging and follow the pre-delivery check list including testing the operation of the lighting.